

Extension Installation

Hardware Brand:
Emtek Inactive



Loosen the set screw on the door handle and unscrew the handle. Remove the nylon washer from the handle and save for later.




Slip the brass sleeve over the threaded post of the escutcheon plate.



Place the nylon washer from STEP 1 onto the extension and dry fit onto the mounting post. You may need to cut the bottom end of the extension shorter.



Thread the 2-inch rod into the door handle. When you dry fit the handle into the extension, the rod should almost touch the mounting post.

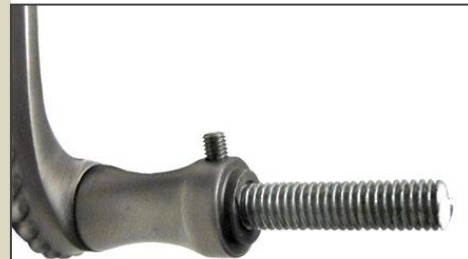

Place the supplied nylon washer onto the door handle and install into the extension. Make sure that ALL SET SCREWS LINE UP. Tighten the screws.

