


Extension

Installation

Hardware Type: Kwikset Dummy



Because the set screw is reverse threaded, you must turn it COUNTER-CLOCKWISE in order to loosen it. Turn the set screw counter-clockwise until the handle is able to be removed.

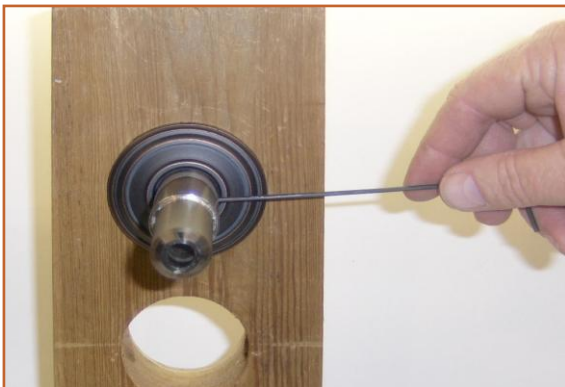

Slide on the ENCI EXTENSION for door handles. Line up the hole on the barrel of the extension with the set screw. Now turn the set screw CLOCKWISE until the extension is secure.



Make sure the extension is not too long to fit inside the door handle. If it is too long, you may need to cut off the UNFINISHED END of the extension; be careful not to damage the FINISHED end of the extension.



Replace the door handle. Line up the hole in the handle over the set screw of the extension. Turn the screw COUNTER-CLOCKWISE until the door handle is secure.

Questions? Get in touch with Ed.
316.733.6553 • 316.641.0114
enci@enci.us

A product of
Ed Nelson Construction, Inc.
15150 E Sundance Court
Wichita, KS 67230-7172

Online at
www.enci.us
© ENCI. All rights reserved.