


## Schlage® Passage Dummy

Handle Type:



Insert a thin rod through the hole at the base of the door handle. Push to release the handle.

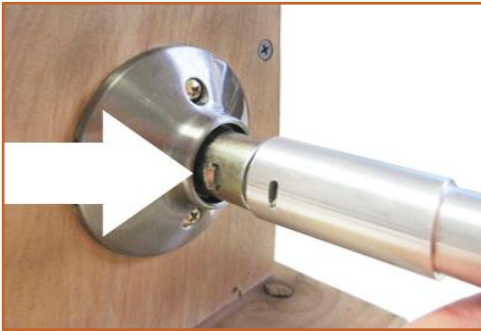

Pull off the door handle and install the INNER EXTENSION. Make sure that the slot at the base of the extension lines up with the clip.



Push on the INNER EXTENSION. Turn it back and forth in order to seat the clip into the slot at the base of the extension.




Dry fit the OUTER EXTENSION SLEEVE by sliding it over the inner extension. DO NOT GLUE YET.




Make sure that the hole at the base of the outer extension sleeve lines up with the clip.



OPTIONAL: You may glue the outer extension sleeve onto the inner extension, but it is not necessary. If you choose to do so, remove the OUTER EXTENSION SLEEVE. Add a few heavy beads of *Loctite* adhesive NO CLOSER THAN 1/2-inch from the escutcheon plate. DO NOT apply adhesive near the clip or the escutcheon plate. Replace the outer extension sleeve back onto the inner extension. Again, make sure that the hole at the base lines up with the clip. Wipe away any excess glue.

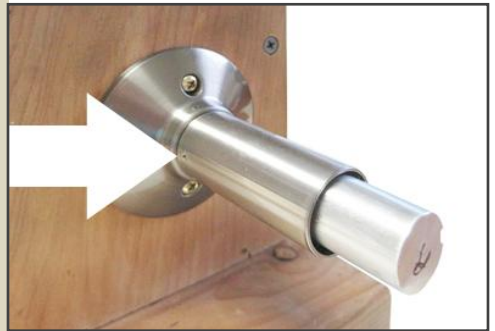

Dry fit the handle. DO NOT GLUE YET. Make sure that the handle seats onto the outer extension sleeve with NO GAP.

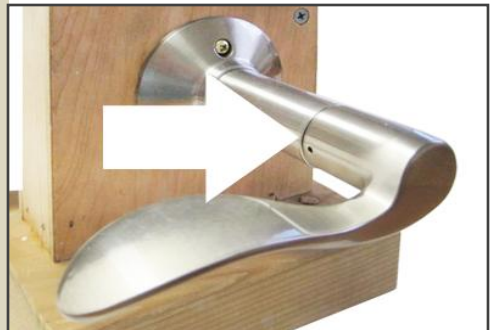

Add heavy beads of *Loctite* adhesive where the handle will be installed.



Replace the door handle. Make sure that it is straight. Hold it in place for ten minutes or until it is stuck. Wipe away any excess glue. (Note: *Loctite* adhesive sets in ten minutes and bonds in 24 hours.)



Questions? Get in touch with Ed.  
316.733.6553 ■ 316.641.0114 ■ [enci@enci.us](mailto:enci@enci.us)